



Talking Books

Using the Digital Talking Book Player: Standard

Navigating a DAISY Book

You can navigate a DAISY book by chapter using the Rewind and Fast Forward buttons.

DAISY stands for Digital Accessible Information System. It's the world standard for digital talking books for people who are blind or have a print disability.

On the Standard player, use the Rewind and Fast Forward buttons to move through a DAISY talking book.

When you press and hold Rewind, the button player announces, "back 20 seconds." Continue to hold the Rewind button and it announces, "back one minute." The longer you hold down the button, the further back in the book you jump, moving from 1 minute to 5 minutes, 15 minutes, 30 minutes, and then to "jump back by chapter."

Once you hear the player announce, "jump back by chapter," if you continue pressing the button, you hear a single beep for each chapter. When you release Rewind, the chapter name is announced if the reading position has crossed a chapter boundary.

By pressing and holding Rewind or Fast Forward, you can quickly move between chapters.