



Amazon Fire TV Stick

VoiceView Verbosity Settings

1. Turn on VoiceView by pressing and holding the **Back** and **Menu** buttons on your remote
2. Move to **Settings** and press **Select**.
3. Move to **Accessibility** and press **Select**.
4. Next, move to **VoiceView** and press **Select**.
5. Press the **Down** button repeatedly until you land on **Verbosity**. Then press **Select**.
6. VoiceView reads the first option: **Speak Window & Container Content** and tells you if the control is on or off.
7. This control announces the context of the current area. For example, the title of the current window. Press **Select** to turn it on or off.
8. Press the **Down** button to move to the next option, **Speak Role**.
9. This control announces item types, such as **Button** or **Check Box**. Press **Select** to turn this control on or off.
10. Press the **Down** button to move to **Speak Index**.

11. This control announces the location and count of items in a current group, such as “Item 1 of 3.” Press **Select** to turn the control on or off.
12. Press the **Down** button to move to the next control, **Speak Usage Hints**.
13. This controls provides tips for interacting with the current area of the user interface such as “Double Tap to Activate.” Press **Select** to turn it on or off.
14. Press the **Down** button to move to **Speak Screen Description**.
15. This control describes the screen layout and usage. When it’s turned off, it only speaks the first time. Press **Select** to turn it on or off.
16. Press the **Down** button to move to **Speak Described By**.
17. This control provides information related the currently focused item. Press **Select** to turn it on or off.
18. Press the **Down** button to move to the next control, **Speak State Before Long Titles (Experimental)**.
19. The state of items, such as **checked**, **selected**, or **disabled**, will be spoken before the item label.
20. Press the **Down** button to go to the final option, **Reset to Default**.

21. This control resets the **Verbosity** options to their default values.
22. Press the **Back** button to return to **Accessibility Menu** or the **Home** button to return to **Home**.