



Amazon Fire TV Stick

Audio Description

Audio description provides narration for compatible movies and TV shows.

Audio Description describes actions, characters, scene changes, on-screen text, and other visual content. **Give it a try!**

Remote Control Review

These are the buttons on your Fire TV Stick remote:

- **Power:** Top left corner of remote. Turns your Amazon Fire TV Stick on and off.
- **Alexa Voice:** Top center of remote. Use this digital assistant to find and launch shows.
- **Four-Way Directional Pad** surrounding a large center button:
 - **Top:** Press to move up.
 - **Bottom:** Press to move down.
 - **Left:** Press to move left.
 - **Right:** Press to move right.
 - **Center:** Press for **Select** or **OK**.

- First row of buttons below the pad, from left to right:
 - **Back**: Move back to a previous screen.
 - **Home**: Return to your home screen. This button has a raised tactile dot.
 - **Menu**: Press for context-specific menus.
- Second row of buttons below the pad, from left to right:
 - **Rewind**
 - **Play/Pause**
 - **Fast Forward**

Opening Prime Video

1. Press and hold the **Back** and **Menu** buttons together to activate the VoiceView command.
2. The VoiceView command brings you to the home screen with the focus on the **Home** icon in the **Main Menu** bar.

Tip: If you'd like to learn more about the Fire TV Stick remote and VoiceView, be sure to check out the workshops on those topics in this series.

3. Press and hold the **Voice** button. After the tone, say, "Open Prime Video."

Playing a Prime Video Movie or TV Show

4. Use the **Down** button until you reach the first Prime Video show.
5. Use the **Right** and **Left** buttons to move forward and back through the video options.
6. When you find one you like, press the **OK** button on your remote.
7. The focus is on **Watch Now**. Press the **OK** button to start playing your movie or TV show.

Turning On Audio Description

8. Press the **Play/Pause** button on your remote to pause your video.
9. Then press the **Menu** button twice to bring up the menu.

Tip: If you are not using VoiceView, just press the Menu button once.

10. Press the **Up** button on your remote to move up to the first menu item, **Audio**.
11. VoiceView announces each menu option and places a green box around it as you move through the menu.

Tip: If you're not using VoiceView, you don't have these helpful tips about where you are in the menu.

12. Press the **OK** button to open the **Audio** options with the focus on **English**, or whatever language you chose as a default when you set up your Fire TV Stick.
13. Press the **OK** button to open the **Audio Languages** options.
14. Press the **Down** button on your remote once to move to **Audio Descriptions** in your default language. Then press the **OK** button.

Tip: If you don't find Audio Description in your menu, it is not available for the video you selected.

15. Press the **Play/Pause** button on your remote to resume playing your video.
16. If the video you're watching is available with audio description, you'll hear a narrator describe the visual elements of the show. This narration is announced between spoken dialogue.

Tip: An increasing number of shows offer audio description, which is marked as AD below the Title. If AD isn't shown, the show or movie selected does not provide audio description.

Turning Off Audio Description

17. Press the **Play/Pause** button on your remote.
18. Then press the **Menu** button twice (or once, if you are not using VoiceView) to bring up the menu.
19. Press the **Up** button on your remote to move up to the first menu item, **Audio**.
20. Press the **OK** button to open the **Audio** options with the focus on **English [Audio Description]**, or whatever language you chose as a default when you set up your Fire TV Stick.
21. Press the **OK** button.
22. Press the **Up** button on your remote to move up to the name of your default language. Then press the **OK** button. This turns off **Audio Description**.