



Amazon Fire TV Stick

Other Helpful Features

Amazon's Fire TV Stick has other features that make it easier to use.

The Fire TV Stick has settings that let you turn off distracting sounds and turn on helpful sound settings. **Try it out!**

Remote Control Review

These are the buttons on your Fire TV Stick remote:

- **Power:** Top left corner of remote. Turns your Amazon Fire TV Stick on and off.
- **Alexa Voice:** Top center of remote. Use this digital assistant to find and launch shows.
- **Four-Way Directional Pad** surrounding a large center button:
 - **Top:** Press to move up.
 - **Bottom:** Press to move down.
 - **Left:** Press to move left.
 - **Right:** Press to move right.
 - **Center:** Press for **Select** or **OK**.

- First row of buttons below the pad, from left to right:
 - **Back:** Move back to a previous screen.
 - **Home:** Return to your home screen. This button has a raised tactile dot.
 - **Menu:** Press for context-specific menus.
- Second row of buttons below the pad, from left to right:
 - **Rewind**
 - **Play/Pause**
 - **Fast Forward**

Turning Off Featured Content Options

1. If you use a screen reader, press and hold the **Back** and **Menu** buttons on your remote to turn on VoiceView.
2. Starting from the **Home** icon on the Fire TV Stick home screen, press the **Right** button on the remote until you reach **Settings**.
3. Press the **Select** button to open **Settings**.
4. Press the **Down** button twice to move to **Preferences**. Then press the **Select** button to open the **Preferences** menu.

5. Press the **Down** button until you land on **Featured Content**. Then press the **Select** button to open the **Featured Content** options.
6. The first option, **Allow Video Autoplay**, is on by default. Press the **Select** button to turn this feature off.

Tip: If VoiceView is on and you don't hear the status of the control when you select it, move down and then back up to hear the status.

7. Press the **Down** button to move to the next option, **Allow Audio Autoplay**, which is also on by default.
8. Press the **Select** button to turn it off.

Display & Sounds Options

9. Press the **Back** button on your remote until you are back in **Settings**.
10. Press the **Up** button once to move to the top row. Then press the **Right** button until you reach **Display & Sounds**.
11. Press the **Select** button to open **Display & Sounds**.
12. Press the **Down** button until you land on **Audio**. Then press the **Select** button to open the **Audio** options.

13. Press **Down** on your remote until you reach **Advanced Audio**. Then press the **Select** button to open.

14. Press the **Down** button to move to **Dialogue Enhancer**, which is off by default.

15. Press the **Select** button to turn it on.

Tip: This feature works by boosting a show's dialogue separately from background noises like music. It increases the volume of the dialogue without increasing the overall volume of a scene.

16. Press the **Home** button on your remote to return to the Fire TV Stick home screen.